



Quick Release Knobs Instructions and Owners Manual

Fishmaster, Inc.
www.Fishmaster.com
Support@Fishmaster.com

Phone: 877-777-8693
Fax: 877-437-6210

THANK YOU FOR YOUR BUSINESS. IF YOU ARE NOT COMPLETELY SATISFIED IN ANY WAY WITH YOUR NEW QUICK RELEASE KNOBS, PLEASE CONTACT US. Our entire purpose as a company is to offer great products at affordable prices that our customers love.

Please take a few minutes to read the installation instructions and become familiar with the QUICK RELEASE KNOBS and installation before beginning to ensure a high quality, trouble free installation and use. If you have any questions during your installation give us a call at 877-777-8693 or e-mail Support@Fishmaster.com

IMPORTANT NOTES ON INSTALLING AND USING YOUR NEW QUICK RELEASE KNOBS

- Read entire manual before installation
- Grease all bolts

Fishmaster, Inc Warranty

Fishmaster warrants this product against manufactures defects for a period of five (5) years. Anodized surfaces are specifically excluded, as their care and use cannot be controlled by the manufacturer. Any modifications or improper use, not approved in writing by Fishmaster shall void this warranty. Fishmaster is not responsible for personal injury or damage to the boat caused by the use of this product. Fishmaster's obligation under this warranty shall not include any transportation charges or costs of installation or any liability for direct, indirect or consequential damages resulting from delay or improper installation. If you need to make a warranty claim contact Fishmaster at 877-777-Tower to receive a return authorization number which is required for all claims. Defects must be reported within 30 days of discovery.

Fishmaster Quick Release Knobs



Item	Description
4 Quick Release Knobs	Knobs used to replace bolts in side uprights for easy removal when folding
	OR
4 Quick Release Knobs	Knobs used to replace bolts in top section for easy removal when folding

SIDE UPRIGHT INSTALLATION

Remove the bolts from the hinged area of the side uprights. Leave hinge bolt in. Replace bolts with one Quick Release Knob in the either hole of each leg. One is adequate and the two are for customers that never fold their T-Top down. If needed use an Allen wrench to tighten the knobs.



TOP SECTION INSTALLATION

In the center of the top section there are 3 bolts holding the two sections together remove the bolts on the outside and replace with the Quick Release knobs. Leave the center bolt attached. If needed use an Allen wrench to tighten the knobs.

