




# Universal Mounting Bracket

## INSTALLATION MANUAL


### Included Hardware Identification

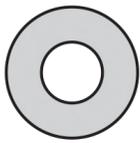

2x



2x



2x

Actual Size

The Universal Mounting Bracket is designed to mount onto the front or rear center of the Fishmaster T-Tops. To mount the bracket anywhere else on the T-Top you must drill your own holes. This may also be the case if you are not using a Fishmaster T-Top.

### Gather Additional Tools and Materials

Allen Wrench Set



Permanent Marker



10mm Drill Bit




Hand Drill




Do you have questions? Call us @ 877.777.8693 Monday – Friday, 8am–5pm EST

## Step 1: Drill Holes For Accessory As Desired

1. Use a permanent marker to mark where to drill.

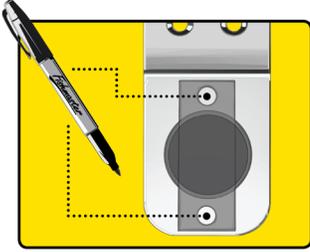

2. Drill holes through the bracket in marked areas.

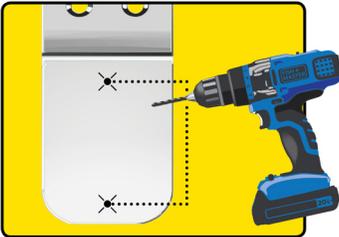

### Option 1




**PRO TIP:** The bracket can be mounted in two orientations. See Option 1 and Option 2.

### Option 2




## Step 2: Mount Bracket to T-Top


1. Remove pre-existing hardware.

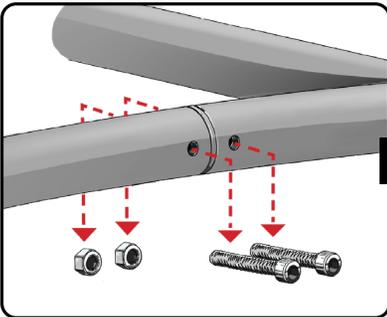


2. Position bracket and install hardware.

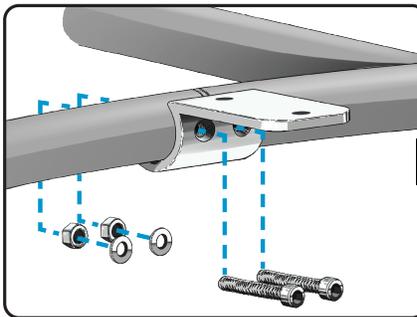

3. Mount chosen accessories.

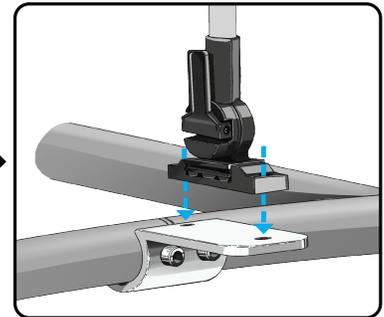

Top View

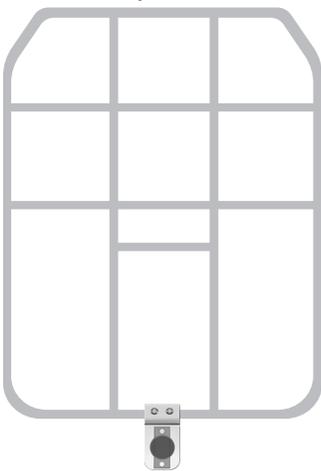

**PRO TIP:** If installing to a different brand or location on your t-top use a 10mm drill bit to drill the holes for the bracket.



\*Shown with LED Navigation Light



Do you have questions? Call us @ 877.777.8693 Monday – Friday, 8am–5pm EST

2